

TYR Tactical™ Ballistics

Removable ballistic panels or body armor with permanent non-removable ballistics should be cleaned in the following method:

- DO NOT IMMERSE IN LIQUID
- Gently wipe-down ballistic panels with a damp sponge or wash cloth using mild detergent.
Remove any excess detergent with a damp sponge or wash cloth using clean water.
- Allow to thoroughly air dry before inserting panels into carrier.



Ballistic Panels

Additional Instructions:


- DO NOT DRY CLEAN, MACHINE WASH OR BLEACH
- DO NOT DRY OUTDOORS IN THE SUN



TYR Tactical™ Nylon

All of our nylon is treated with chemicals to reduce your IR signature. Therefore you should never use a phosphorus based detergent to clean your kit, doing so will breakdown its IR treatment causing it to glow under IR light.

- Remove ballistic panels, if applicable, from your kit.
- Brush off as much surface dust as possible.
- Scrub set-in stains with a nylon brush using a mild non phosphorus detergent such as dish soap.
- Wipe the excess soap off with a damp sponge.
- Air-dry indoors at room temperature.

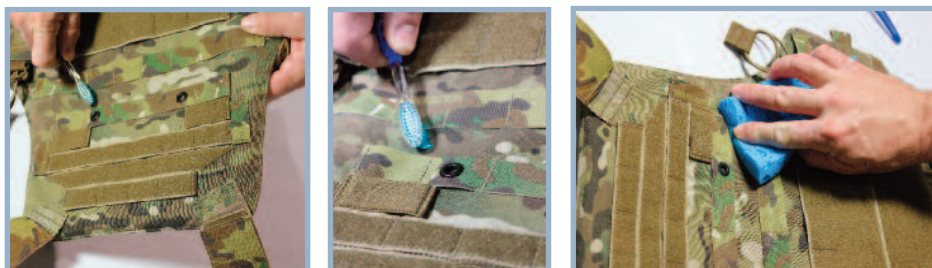

Additional Instructions:

- DO NOT BLEACH
- CARRIER MUST BE COMPLETELY DRY BEFORE INSERTING THE BALLISTIC PANELS

